

METERMAN PROGRAMMING CARD

STEP 1

Place the "Meterman Programming Card" in the card token aperture making sure that the printed information is uppermost and that the arrows are pointing, in the direction of the meter.

Insert the Card in and then out.

On removing the card the display will change to: "**#PROGRAMMING#**"

STEP 2

Using the BLUE button on the front of the meter, advance through the different parameter displays pressing and releasing the button each time until you reach the desired setting for re-programming.

STEP 3

Depress and release the GREY button to move the flashing cursor to the decimal digit that you wish to change at which point do not release the grey button but continue to hold it down.

Whilst pressing the Grey button down depress the BLUE button at the same time to increase the digit's to the required setting.

- If you do release the Grey button before making the change simply continue to press the Grey button again until the cursor returns to the desired position.

To adjust other parameter settings simply advance through the display cycle using the BLUE button and repeat the above procedure.

- If you pause whilst in Programming mode for longer than 30 seconds the meter will return to it's usual display mode - this is a security measure. If this happens you will need to re-insert your Programming Card and start the procedure again.

Please note when setting the P.P.U if there is a rate 2 set it the same as rate 1.